


I-138B/I-138G Youth

Web Stinger

Small: sizes 12-1
Medium: sizes 2-5

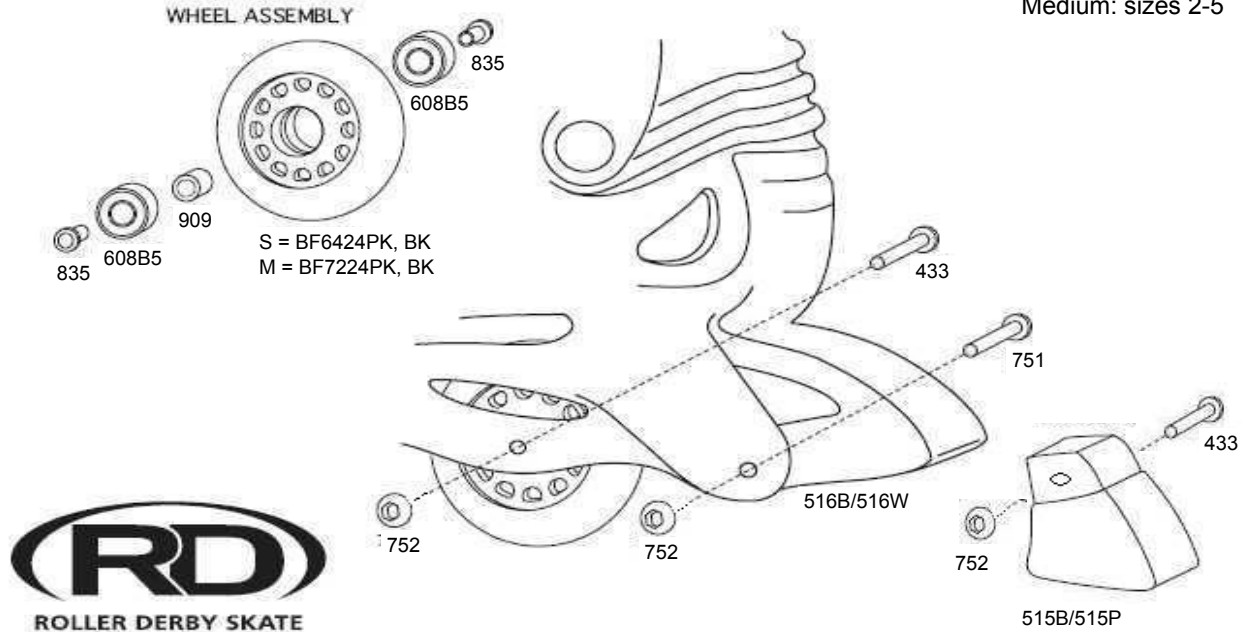

Part #	Description	Cost	Qty	Total	Part #	Description	Cost	Qty	Total
433	Female Axle	\$0.40			516W	Heel Stop Bracket - White	\$1.50		
752	Male Axle Screw	\$0.40			516B	Heel Stop Bracket - Black	\$1.50		
751	Female Axle	\$0.40			515P	Heel Stop - Pink	\$2.00		
835	Bearing Insert	\$0.12			515B	Heel Stop - Black	\$2.00		
909	Bearing Spacer	\$0.12			3238WL	Strap White Left	\$1.50		
608B5	Bearing - ABEC 5	\$2.00			3238WR	Strap White Right	\$1.50		
BF6424PK	Wheel - 64mm Pink	\$3.00			3238BL	Strap Black Left	\$1.50		
BF6424BK	Wheel - 64mm Black	\$3.00			3238BR	Strap Black Right	\$1.50		
BF7224PK	Wheel - 72mm Pink	\$3.00			2238P	Liner Pink Sm or Med	\$10.00		
BF7224BK	Wheel - 72mm Black	\$3.00			2238B	Liner Black Sm or Med	\$10.00		

All orders must be paid by check, Visa, or Mastercard prior to shipment
All orders are required to be faxed or mailed with signature

CA residents add 8% tax
IL residents add 7.25% tax
PA residents add 6% tax

Subtotal	
Tax	
Shipping and Handling	\$6.25
TOTAL	

Name: _____ Signature: _____ Phone: _____

Address: _____ City: _____ State: _____ Zip: _____

MC or Visa #: _____ Exp Date: _____

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.
1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis mâles et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis mâles et femelles doivent être serrées fermement. Si le frein arrière montre des signes apparents d'usure. Veuillez le remplacer.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.
1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva