


I204 PARTS LIST

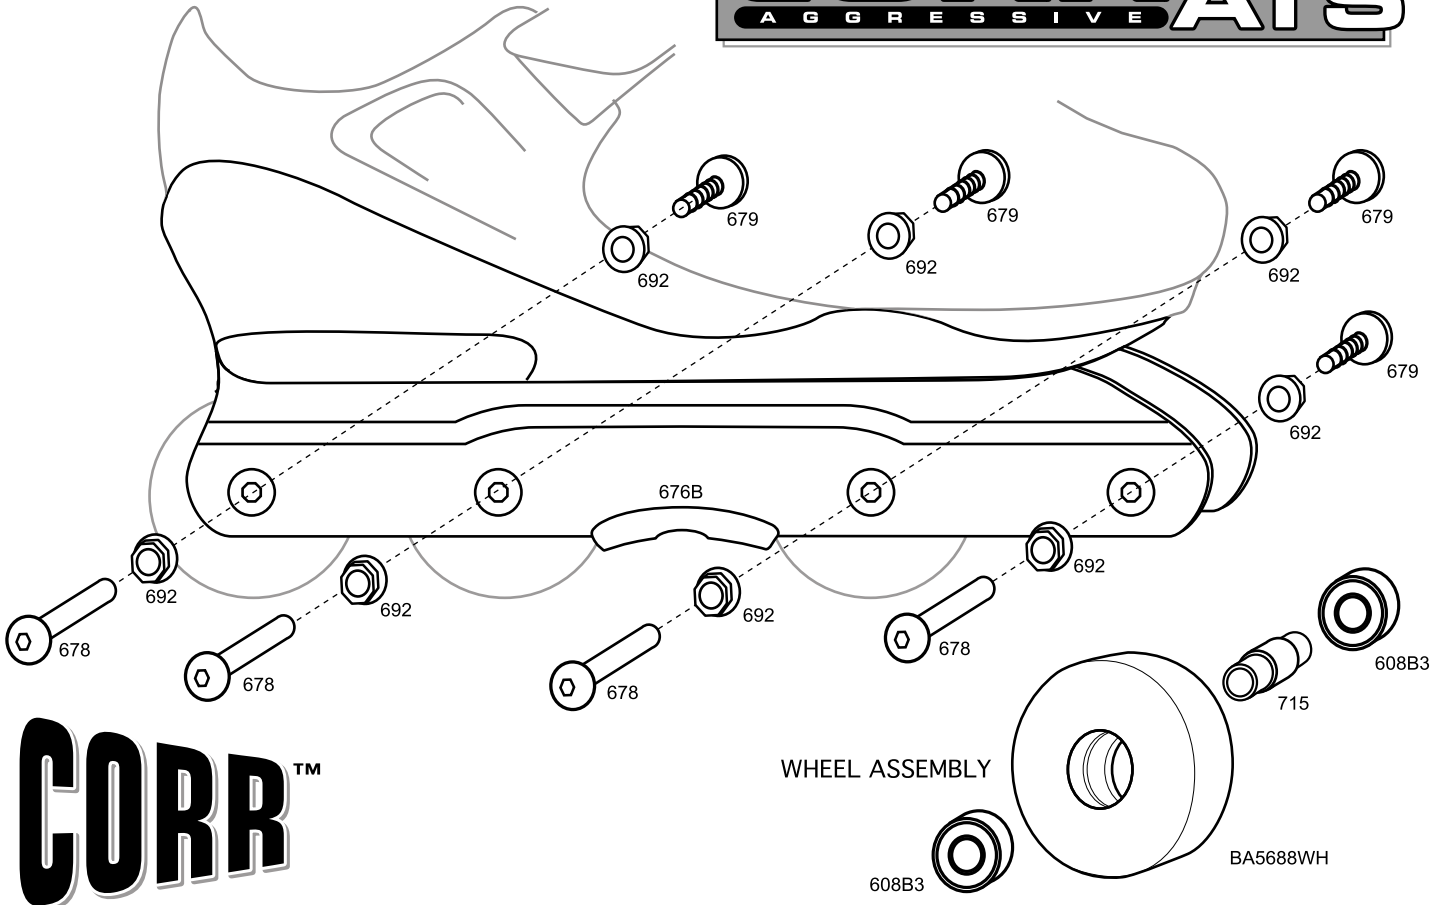

WHEEL ASSEMBLY

608B3

BA5688WH

ALL PARTS ORDERS MUST BE FAXED OR MAILED. NO PHONE ORDERS WILL BE ACCEPTED.

Part#	Description	Cost
678	34mm Female Axle	0.40
679	10mm Male Axle Screw	0.40
715	Self Centering Spacer	0.20
692	Chassis Inserts	0.40
608B3	Bearing - ABEC 3	2.00
BA5688WH	Wheel - 56mm White	1.50

Part#	Description	Cost
694L	Power Strap - Left	1.00
694R	Power Strap - Right	1.00
3204L	Strap / Lever - Left	1.50
3204R	Strap / Lever - Right	1.50
3325	Clip - Black	0.50
676B	Grind Block	0.75

Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.

Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.

Sur chaque roue, vérifiez les vis de l'essieu. Les vis mâles et femelles doivent être serrées fermement avant l'utilisation des patins.

Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.