


I-247 / I-347 PARTS LIST

HYBRID G700

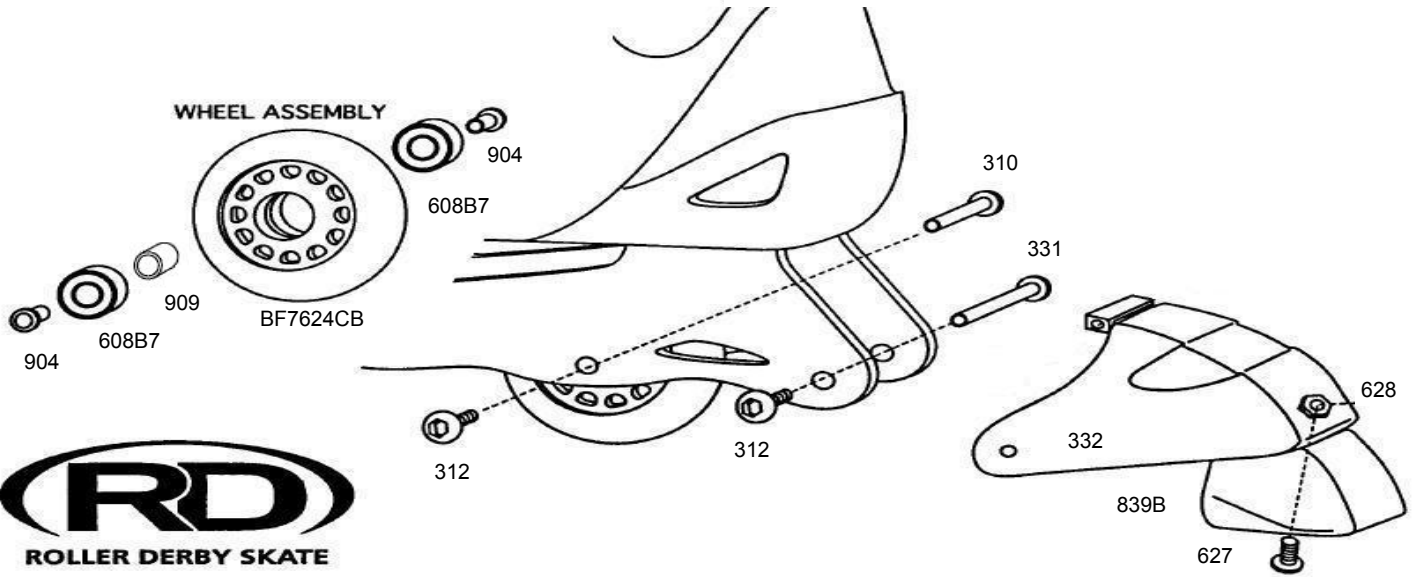

| Part # | Description | Cost | Qty | Total | Part # | Description | Cost | Qty | Total |
|----------|--------------------------|--------|-----|-------|--------|----------------------|--------|-----|-------|
| 310 | Female Axle 35mm | \$0.40 | | | 332 | Heel Stop Bracket | \$1.75 | | |
| 331 | Female Axle 39mm (Brake) | \$0.40 | | | 839B | Heel Stop - Black | \$1.50 | | |
| 312 | Male Axle Screw 9mm | \$0.40 | | | 627 | Heel Stop Screw 32mm | \$0.40 | | |
| 904 | Bearing Alignment Insert | \$0.12 | | | 628 | Heel Stop Locknut | \$0.20 | | |
| 909 | Bearing Spacer | \$0.12 | | | 3347 | Strap/Lever - Red | \$1.50 | | |
| 608B7 | Bearing - ABEC 7 | \$2.00 | | | 3246 | Clip - Black | \$0.50 | | |
| BF7624CB | Wheel - 76mm Clear/Black | \$4.00 | | | | | | | |

All orders must be paid by check, Visa, or Mastercard prior to shipment
 All orders are required to be faxed or mailed with signature

CA residents add 8% tax
 IL residents add 7.25% tax
 PA residents add 6% tax

| | |
|-----------------------|--------|
| Subtotal | |
| Tax | |
| Shipping and Handling | \$6.25 |
| TOTAL | |

Name: _____ Signature: _____ Phone: _____

Address: _____ City: _____ State: _____ Zip: _____

MC or Visa #: _____ Exp Date: _____

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
 2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.
-
1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis mâles et femelles doivent être serrées fermement avant l'utilisation des patins.
 2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis mâles et femelles doivent être serrées fermement. Si le frein arrière montre des signes apparents d'usure. Veuillez le remplacer.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
 2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.
-
1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
 2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva