


I-246 / I-346 PARTS LIST

HYBRID G900

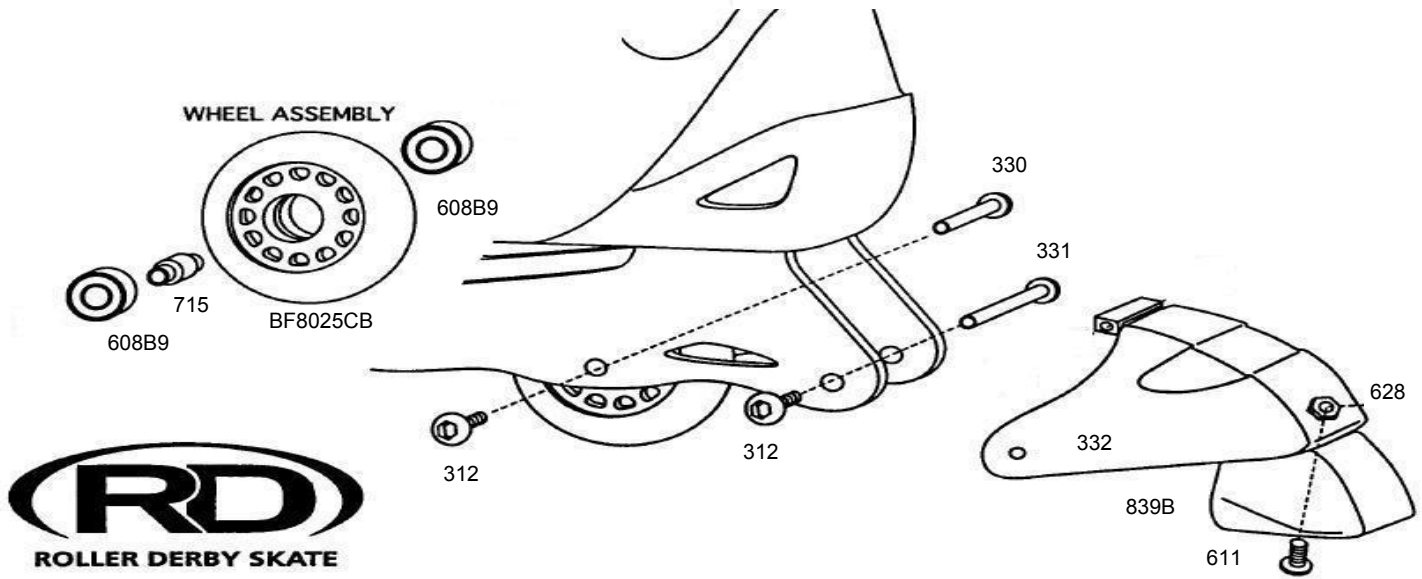

Part #	Description	Cost	Qty	Total	Part #	Description	Cost	Qty	Total
330	Female Axle 28mm	\$0.40			332	Heel Stop Bracket	\$1.75		
331	Female Axle 39mm (Brake)	\$0.40			839B	Heel Stop - Black	\$1.50		
312	Male Axle Screw 9mm	\$0.40			611	Heel Stop Screw 32mm	\$0.40		
715	Bearing Spacer	\$0.40			628	Heel Stop Locknut	\$0.20		
608B9	Bearing - ABEC 9	\$2.50			3346	Strap/Lever - Blue	\$1.50		
BF8025CB	Wheel - 80mm Clear/Black	\$5.00			3246	Clip - Black	\$0.50		

All orders must be paid by check, Visa, or Mastercard prior to shipment
 All orders are required to be faxed or mailed with signature

CA residents add 8% tax
 IL residents add 7.25% tax
 PA residents add 6% tax

Subtotal	
Tax	
Shipping and Handling	\$6.25
TOTAL	

Name: _____ Signature: _____ Phone: _____

Address: _____ City: _____ State: _____ Zip: _____

MC or Visa #: _____ Exp Date: _____

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.

1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis males et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis males et femelles doivent être serrées fermement. Si le frein arriere montre des signes apparents d'usure. Veuillez le remplacer.

1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva